







### **Technical data**

Model	Max horizontal reach*	Weight	Oil	Rotor	Pto	Flail head angle
	m	Kg	1	Rpm	MAX Rpm	
TXV50 Energy	4,70 - 5,24	1.250	210	3.000	540	230°
TXV60 Energy	5,55 - 6,25	1.295	210	3.000	540	230°

\* Reach measured from tractor centre line to head edge.

# Machines with cable controls "Classic"

Model
-------

TXV50 Energy with flail head TN120 m 1,20 TXV60 Energy with flail head TN120 m 1,20

## Machines with electro-hydraulic proportional controls "Comfort"

Model

TXV50 Energy Comfort with flail head TN120 m 1,20 TXV60 Energy Comfort with flail head TN120 m 1,20

## Completing equipment to the base machine

WARNING: due to the high offset loads on the linkages it is necessary to fit two stabilizers

Stabilizers to the tractor (cod. TK8005/06)

Fixed linkage to be adapted to the tractor top link area (cod. ATT/4)

Stabilizers for fixed linkage (cod. TK8005/06)

### Option

Lift float (cod. TXV5007/06)

Flail head	TN120	4300
Width (m)	1,20	
Rotor speed (rpm)	3000	
Blade tip speed (m/sec)	60	
Flail head angle	235°	TN120
Weight (Kg)	285	Direct drive

Flails TN120					
Interchangeable on the same rotor		Interchangeable on the same r	Interchangeable on the same rotor		
Multiuse and straight flails for: grass, bushes, shrubs, sticks, wood	"T" Hammer blades for wood	Articulated and straight flails for: grass, sticks, shrubs	Hedge trimming blades for: grass, hedges		
Ø max 4 cm	Ø max 5 cm	Ø max 2,5 cm	Ø max 1 cm		
≭	T	X	ď		
Cod. 0901003 Cod. 0901148	Cod. 0901141	Cod. 0901068 Cod. 0901153	Cod. 0901139		
n° 36 + 18	n° 18	n° 48 + 24	n° 24		

FERRI srl - Via Govoni, 30 - 44034 Tamara (FE) Italy - Tel. +39 0532 866866 - Fax +39 0532 866851 - info@ferrisrl.it - www.ferrisrl.it Spare parts: Tel: +39 0532 866993 - Fax: +39 0532 867061 - e-mail: parts@ferrisrl.it After sales service: Tel: +39 0532 866991 - Fax: +39 0532 866851 - e-mail: service@ferrisrl.it



#### Equipped with:

Flail head

- Totally independent hydraulic system
- FLOATING head system
- Worm gearbox "HP" (high performance) high torque transmission
- Hydraulic break-back with accumulator controlled autoreset facility
- Oil cooler with thermostat
- Reversible rotor by cable
- Pressure relief valve kit for rack on flail head
- Front and rear abrasion resistant guard for flail head
- Oil and pto shaft

### Warning

IT IS RECOMMENDED that the connection between tractor and shredder and its setting up should be made with the Dealer according the instructions and warnings listed on our Use and Maintenance Manual. For further information please contact our after sales service.